NICON NERO Quick Start Guide

Hardware: Mount. Cables. Connect.



Volume: Visualize. Set up. Aim.

Lay out markers to define the desired volume.

Point the cameras to provide roughly the required coverage. You will be able to refine camera aiming later, using your Vicon software.



For easy system setup, use the Vicon Control app See vicon.com/products/software/vicon-control.

Software: Download. Install. License.

Www.vicon.com/downloads (supported software: Vicon Nexus 3.4, Vicon Tracker 3.3, Vicon Blade 3.4 or later)



2 Run SETUP.EXE.

3 Click Start, then Vicon Product Licensing.





Request a license, save it to a suitable location and activate it.





For details on installing and licensing, see your Vicon software documentation.

System: Administrator. IP address. Adapter settings.

Important: Ensure you are logged on as Administrator.

Open the Network
 Connections window.

2 Right-click on the network port that connects to the PoE switch and click **Properties**.

3 In the **Properties** dialog box, click **Configure** and then the **Advanced** tab.

In the Settings list, ensure the values shown (in the images on the right and the first two columns on page 3) are selected, then click OK to close the dialog box.

6 Repeat step 2 to re-open the **Properties** dialog box.

6 Ensure only Internet Protocol Version 4 is checked (see page 3, last column) and click the Properties button.

eaming	VLANs	Boot O	ptions	Driv	/er	Details	Resource
General	Link !	Speed	Adv	anced	1	Power I	Aanagement
					_		Velue
	ungs:					_	Value:
G	gabit Ma	ster Slav	ve Mod	e			Enab
di la	mbo Pac	ket	IT I				Disab
La	arae Send	d Offload	d V2 (IF	v4)		-	Enab
ettings:					Valu	e:	
Gigabit Ma	ster Slave I	Mode		-	Ent	bled	-
Jumbo Pad	sket				Dis	abled	
Large Sen	d Officad V	2 (IPv4)			- Drie	ibled	
Locally Ad	ministered /	Address					
Log Link S	tate Event			-		Line De	free da
umbading	options					use <u>D</u> e	rout
interrupt M	oderation						_
Allows th	ne adapter	to modera	ite interri	upts.			Â
When a p which all	backet arriv	iver to be	dapter ge odle the	nerat	t At	n interrupt, oreater lini	
speeds,	more intern	upts are o	created, a	and C	PU ut	lization als	0 =
increase	s. This resu	ults in poo	r system	n perfe	ormai	ice. When	you
Terring	let Server	Adapter	1340-T4	Prop	pertie	Driver	Deteile
Teaming General	VLA	Adapter Ns Speed	Boot Op Advi	tions	ertie	Driver Power M	Details /anagement
Teaming General Sett	VLA	Adapter Ns Speed	Boot Op Advi	tions		Driver Power M	Details Management Value:
Teaming General Setti	VLA Unk ings: abit Mast	Adapter Ns Speed	Boot Op Advi e Mode	tions anced	pertie	Driver Power M	Details <u>Management</u> Value: Disable
Teaming General Setti Gig Inte	VLA Unk : ings: abit Mast erupt Mo	Adapter Ns Speed ter Slave deration	Boot Op Advi e Mode	tions anced	pertie	Driver Power M	Details Management Value: Disable Disable
Teaming General Setti Gig Inte Jun Lar	VLA Unk: ings: abit Mast mupt Mo bo Pack ge Send	Adapter Ns Speed ter Slave deration tet Offload	Boot Op Advi e Mode	tions anced		Driver Power M	Details Janagement Value: Disable Disable 4088 B
Teaming General Setti Gig Inte Jun Lar	VLA Unk sings: abit Mast erupt Mon bo Pack ge Send ne Send	Adapter Ns Speed ter Slave deration cet Offload Offload	I340-T4 Boot Op Advi e Mode V2 (IPv V2 (IPv	tions anced (4)		Driver Power M	Details Management Value: Disable 4088 B 9014 B
Teaming General Setti Gig Inte Un Lar Lar ettings	VLA Unk sings: abit Mast mupt Mon bo Pack ge Send ne Send	Adapter Ns Speed ter Slave deration tet Offload Offload	Boot Op Advi e Mode V2 (IPv V2 (IPv	1 Prop tions anced (4)	Value	Driver Power N	Details Management Value: Disable 4088 B 9014 B
Teaming General Sett Un Lar Lar Lar Sigabt Ma Interupt M	VLA Link s ings: abit Mast erupt Mo- hbo Pack ge Send ne Send ster Slave I oderation	Adapter Ns Speed ter Slave deration cet Offload Offload	I340-T4 Boot Op Advi e Mode V2 (IPv V2 (IPv	(4)	Value	Driver Power M	Details Management Value: Disable Disable 4088 B 9014 B
Teaming General Sett Gig Inte Jun Lar Lar Sigebt Ma Interrupt M	VLA Unk : ings: abit Mast mupt Mo- hoo Pack ge Send de Send ster Slave I oderation	Adapter Ns Speed ter Slave deration tet Offload Offload Mode	I340-T4 Boot Op Advi e Mode V2 (IPv V2 (IPv	(4)	Value Disi 408	Driver Power M	Details Management Value: Disable 4088 B 9014 B
Teaming General Sett Gig Inte Jun Lar Lar Ettings Gigabit Ma Interupt M Large Sen Large Sen	VLA Unk : ings: abit Mast mupt Mon bo Pack ge Send de Send ster Slave I oderation See d Offload V d Offload V	Adapter Ns Speed ter Slave deration (et Offload Offload Offload Mode 2 (IPv4) 2 (IPv6)	Boot Op Advi e Mode	r4)	Value Dis 408	Driver Power N E S S S S S S S S S S S S S S S S S S	Details Aanagement Value: Disable 4088 B 9014 B
Teaming General Setti Gig Inte Jun Lar Gigabit Ma Interrupt M United Set Large Sen Large Sen Large Sen Large Sen Large Sen Large Sen	VLA Link: ings: abit Mast mupt Mon bo Pack ge Send de Send ster Slave I oderation isso d Offload V d Offload V d Offload V d Offload V	Adapter Ns Speed ter Slave deration cet Offload Offload Offload Offload 2 (IPv4) 2 (IPv6) Address	Boot Op Advi e Mode	(4) (6)	Value Dis 408	Driver Power N E abled 8 Bytes 4 Bytes	Details Management Value: Disable dDisable 9014 B
Teaming General Setti Gig Inte Jun Lar Gigabit Ma Interrupt M United Set Large Sen Large Sen Large Sen Large Sen Large Sen Lar	VLA Unk : ings: abit Mast mupt Mo- hoo Pack ge Send de Send doffaad V doffaad V doffaad V doffaad V doffaad V doffaad V doffaad V cotions	Adapter Ns Speed ter Slave deration (et Offload Offload Offload Mode 2 (IPv4) 2 (IPv6) address	I340-T4 Boot Op Advi e Mode	(4)	Value Dis 30	Driver Power M E abled 8 Bytes 4 Bytes Use Def	Details Management Value: Disable dDB8 B 9014 B 9014 B
Teaming General Sett Jun Lar Settings Gigabt Ma Interupt M Large Sen Large Sen Large Sen Large Sen Large Sen Localy Ad Log Link S Offloading Jumbo Pac	VLA Unk : ings: abit Mast mupt Mo- hoo Pack ge Send de	Adapter Ns Speed ter Slave deration (et Offload Offload Offload Mode 2 (IPv4) 2 (IPv6) address	I340-T4 Boot Op Advi e Mode V2 (IPv V2 (IPv	(4) (6)	Value Diss Sol	Driver Power IV E abled abled bbled 4 Bytes 4 Bytes	Details Management Value: Disable Disable 014 E 9014 E
Teaming General Sett Jun Lan Settings Gigabit Ma Interupt M Large Sen Large Sen Large Sen Large Sen Large Sen Localy Ad Log Link S Officading Jumbo Pac	VLA Link : ings: abit Mast emupt Mon bo Pack ge Send de Send definad V doffload V dofflo	Adapter Ns Speed ter Slave deration tet Offload Offload Offload 2 (IPv4) 2 (IPv4) Address ket capable	I340-T4 Boot Op Advi e Mode V2 (IPs V2 (IPs	(4) (6)	Value Dis 408	Driver Power IV E Babled Babled Babled Babled Babled Babled Bables Use Det	Details Management Value: Disable 4088.8 9014.8 9014.8
Teaming General Setti June June Gigabt Ma Interupt M Large Sen Large Sen Large Sen Lar	VLA Link : ings: abit Masterrupt Mon hoo Pack ge Send de Send	Adapter Ns Speed ter Slave deration tet Offload Offload Offload 2 (IPv4) 2 (IPv4) Address ket capable s make up	I340-T4 Boot Op Advi Mode V2 (IPs V2 (IPs V2 (IPs)	(4) (6) (P/IP (prity o	Value Dis 408 50 Packs	Driver Power N Power N E E Babled Babled Babled Babled Babled Babled Babled Babled Babled Babled Babled Babled	Details Aanagement Value: Disable 014 E 9014 E 9014 E
Teaming General Sett Inte Inte Inte Inte Inte Inte Inte I	VLA ULA Link: ings: abit Mast emupt Mo- bo Pack ge Send ne Send set Slave I oderation doffload V d Offload V	Adapter Ns Speed ter Slave deration cet Offload Offload Mode 2 (IPv4) 2 (IPv6) Address ket capable s make up an prove we	I340-T4 Boot Op Advi e Mode V2 (IPN V2 (IPN V2 (IPN V2 (IPN V2 (IPN	(4) (6) (74) (6) (74) (75) (74) (76) (74) (76) (77) (77) (77) (77) (77) (77) (77	Value Dis 408 50 Packet	Driver Power M Power M E B B B B B B B B B B B B B B B B B C B B C C B C C B C C B C C B C C B C C B C C B C C B C C B C C B C C B C C B C C C B C C C C B C	Details Anagement Value: Disable An88 p 9014 P 9014 P
Teaming General Setti Gig Inter Lar Lar Lar Settings Gigabit Ma Interrupt M Large Sen Lacaly Ad Localy Ad Log Link S Offloading Jumbo Pac Enables where la additiona CPU utiliz Jumbo Pac	VLA Unk: ings: abit Mast emupt Moo bo Pack ge Send ac Send doffload V doffload V	Adapter Ns Speed ter Slave deration tet Offload Offload Mode 2 (IPv4) 2 (IPv6) Address ket capabi s make up an be tolen mprove w larger thai	I340-T4 Boot Opp Adv/ a Mode to Mode V2 (IP\ V2 (IP\))))))))))))))))))))))))))))))))))))	(4) (6) (74) (6) (74) (75) (74) (75) (74) (75) (75) (75) (75) (75) (75) (75) (75	Value Dis 408 E00 packet facket	Driver Power M E abled b	Details Aanagement Value: Disable Disable Disable 014 E 014 E faut tions
Teaming General Setti Juni Lar Lar Bittinga Gigabit Ma Internupt M Large Sen Large Sen Localy Ad Log Link S Offloading Jumbo Pac Enables J where la additiona CPU utiliz Jumbo Par are appro	VLA ULA Unk : ings: abit Masterrupt Mo- nbo Pack ge Send ace. Send. atter Slave oderation d Offload V d Offload V state Event Options sket Jumbo Pack ge packet I latency cc attaion and it ackets are loximately 1	Adapter Ns Speed ier Slave deration ret Offload Offload Offload Offload Offload 2 (IPv6) Address ket capable and be tolen mprove w larger that Sk in size	I340-14 Boot Op Advi e Mode V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv) Advi V2 (IPv) V2	(4) (4) (6) (74) (6) (74) (75) (74) (75) (77) (77) (77) (77) (77) (77) (77	Value Dis Dis Sol f traf tacke	Driver Power M E E abled 8 Bytos 4 Bytos 4 Bytos 4 Bytos ts. In stua fic and is can redu	Details <u>Aanagement</u> Value: Disable Disable <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u> <u>Boild</u>
Teaming General Settings Gigaba Ma Large Settings Large Sen Large	VLA ULA Unk : ings: abit Masterrupt Mon bo Pack ge Send ac Send. doffload V doffload V d	Adapter Na Speed Iter Slavv deration (I Offload Offload Offload Offload (I Offload Offload (I Offload Offload States an be toler an be tol	I340-14 Boot Op Advi e Mode V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv V2 (IPv) V2 (IPv) V	(4) (5) (74) (6) (74) (75) (77) (77) (77) (77) (77) (77) (77	Value Dis Dis Dis Value Control Value Dis Value Control Value Dis Value Dis Value Dis Value Dis Value Dis Value Dis Value Control Value Va	Driver Power & Power & E Driver Driver Power & E Driver Dr	Details <u>Aanagement</u> Value: Disable Disable <u>4088 B</u> 9014 E 9014 E 9014 E 1005 faut tions tions tions tions tions tions tions tions
Teaming General Setti Gig Inte Lar Settings Gigabat Ma Internut M Large Sen Large Sen	VLA Link : ings: abit Mast empt Mon bo Pack ge Send ater Slave I doffead V d Offload V ate Event Dumbo Pack rge packet I latency ca ater slave I ackets are look sommethy 1 NOTE: Cha loss of con	Adapter Na Speed ter Slave deration (et Offload Offload Offload (2 (Pv4) 2 (Pv6) s make up mprove w larger that spectrate spec	I340-14 Boot Op Advi a Mode V2 (IP\ V2 (IP\))))))))))))))))))))))))))))))))))))	(4) (4) (6) (7) (7) (7) (7) (7) (7) (7) (7) (7) (7	Value Dis 408 200 200 200 200 200 200 200 200 200 2	Driver Power II Power II E Babled ab	Details Value: Disable 1088 B Coll4 B



Specify the IP address 192.168.10.1 and subnet mask 255.255.255.0 (see page 3, last column) and click OK.

For detailed guidance on system setup, download the Vicon PDF, PC Setup for Vicon systems.

System (cont.): Administrator. IP address. Adapter settings.



	et server Adap	101104014	Prope	rties	_
Teaming	VLANs Boo	ot Options	Driver	Details	Resources
Settings	ttings: og Link State floading Optio erformance Op iority & VLAN eceive Side S	Event ons otions caling			Value: Enabled Disabled Enabled
Cog Link St Offloading (Performance Priority & VL Receive Sk Wait for Lini	ate Event Options e Options AN de Scaling Queue k	85		Enabled Disabled Enabled	
Reaching Str	la Scalina				
itel(n) Ethem	et Server Adap	ter 1340-T4	Prope	erties	x
Teaming General Setti Offi Perc Rec Settin Rec	VLANs Bo Link Sneed ings: J Link State E oading Option formance Opt ority & VLAN ceive Side So ceive Side So	vent saling caling Que	Drive anced	rties r Details Power	Resources Management Value: 8 Queues 1 Queues 4 Queues 8 Queues 8 Queues



Run: Start software. Unblock firewall. Connect.



• After you start your Vicon software, ensure that it is not blocked by a firewall and that it shows the system is live.







In the System Resources pane (in Blade, the Selection editor), Shift+click to select all the cameras. In the Properties pane (or Attributes editor), change Grayscale Mode to All.

3 In the **System Resources** pane (or **Selection** editor), select a camera.

Change the View pane to Camera view (or in Blade, click the Camera Layout button and ensure you are looking at a Capture view).

You can now set the camera focus and aperture.

Adjust: Zoom. Grayscale. Focus.











Markers touching

10cm separation

✓ A correct marker image is shown above. The markers are not too small, with centers just off-white (not fully saturated) when viewed from the middle of the volume.

Important: Before you begin system calibration, select all cameras and change Grayscale Mode back to Auto. For more about calibration, see your Vicon software documentation.

Need more help?

Visit www.vicon.com/faqs.

Contact Vicon

X



youtube.com/vicon100 facebook.com/vicon twitter.com/vicon instagram.com/viconmocap linkedin.com/company/vicon vicon.com/products/camerasystems/vero

Denver, CO T:303.799.8686

Los Angeles, CA T:303.799.8686

support@vicon.com

Oxford, UK T:+44.1865.261800

Singapore T:+65 6400 3500

Regulatory information

Radio and television interference

The following topics contain information concerning compliance with regulations of radio and television interference:

- For United States of America customers
- For Canadian customers

For United States of America customers

Federal Communications Commission (FCC) Part 15 Information

FCC This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules (CFR 47:Part 15:B:2013). These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Vicon Motion Systems Ltd is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the

following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Canadian customers

Conformity to the Canadian Interference-Causing Equipment Regulations

This Class A digital apparatus meets the requirements of the Canadian Interference-Causing Equipment Regulations ICES-003:2004.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada ICES-003:2004.

Environmental regulations (European Union customers)

This section lists the directives that apply to Vicon Vero systems.

Important-

This information applies only to European Union member states.

Vicon meets these European Commission directives concerning waste electrical and electronic equipment:

- Directives 2002/95/EC and 2011/65/ EU (for details, see Restriction of the use of certain hazardous substances in electrical and electronic equipment – RoHS and recast (RoHS 2)).
- REACH Declaration of Conformity
- Directive 2202/96/EC (for details, see Waste Electrical and Electronic Equipment (WEEE)).

Restriction of the use of certain hazardous substances in electrical and electronic equipment – RoHS and recast (RoHS 2)

This equipment is fully RoHS- and RoHS 2- compliant. RoHS Directive 2002/95/ EC provides that new electrical and electronic equipment put on the market for the first time from 1 July 2006 should not contain lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyls (PBB), or polybrominated diphenyl ethers (PBDE). The European Union Directive 2011/65/EU provides that new electrical and electronic equipment out on the market for the first time from 3rd January 2014 shall not contain more than permitted levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyls (PBB), or polybrominated diphenyl ethers (PBDE; PentaBDE, OctaBDE; DecaBDE), Mercury (Hg).

REACH Declaration of Conformity

Vicon Motion Systems Ltd is a manufacturer of electronic hardware. We are therefore considered a "downstream user" as far as the REACH document is concerned. Vicon Motion Systems Ltd is therefore not obligated to register with the European Agency for Chemicals 'ECHA'.

Products sold by Vicon Motion Systems Ltd are "articles" as defined in REACH (Article 3 Definitions). Moreover and under normal and reasonably foreseeable circumstances of application, the articles supplied shall not release any substance. For that, Vicon Motion Systems Ltd is neither obligatory for registration nor for the creation of material safety data sheets.

In order to assure our customers of the continual supply of reliable and safe products, we ensure that our suppliers fulfill all requirements regarding chemical substances and prepared materials.

Waste Electrical and Electronic Equipment (WEEE)



The use of the symbol as a marking on the equipment, accessories or literature indicates that this product and its electronic accessories (e.g. USB cable) may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent

potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. Household users should contact either the retailer where they purchased this device, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchasing contract. This device and its electronic accessories should not be mixed with other commercial waste for disposal.

EU Declaration of Conformity (Vicon Vero cameras)

CE 0088

Declaration of Conformity

Medical Devices Directive 93/42/EEC as amended by EU Council Directive 2007/47/EC of 5th September 2007. Electromagnetic Compatibility to EMC Directive 2014/30/EU Electrical Safety to Low Voltage Directive 2014/35/EU.

We, Vicon Motion Systems Limited Unit 14 Minns Estate Oxford OX2 OJB United Kingdom

declare that the VICON VERO Cameras manufactured by VICON MOTION SYSTEMS LIMITED meets ANNEX V and VII Section 5 of the Medical Devices Directive 93/42/EEC as amended by Directive 2007/47/EC in that the Quality Management System has been approved by Lloyd's Register Quality Assurance, a notified body of the European Union (Reg No. 0088) for the manufacture and support of the aforementioned CLASS 1(m) Medical device. Product configurations and software options (Vicon Vero cameras)

right, detail the product configurations and software options that conform to the metrological requirements of the Directive.

This declaration of conformity is issued under the sole responsibility of the manufacturer.

VICON MOTION SYSTEMS LIMITED has tested and demonstrated that all products of its own manufacture meet 2014/30/EU:

Electromagnetic Compatibility to: EN60601-1-2:2007

General Requirements for Safety to: Vero Cameras EN60601-1:2006 + A12:2014 Network Hub UL60950-1, 2nd Edition

Thomas Shannon, TD PhD FIE (Aust), CPEng (Biomed.) Director of Compliance

20th April 2016

Not for use in an operating theater, anesthetic gas environment, or oxygen-rich environments. Not for use where there is a risk of compromising the essential performance of medical electrical equipment. Not suitable for use in high magnetic flux, ionizing radiation, dust ingress, high vibration, sterile, or life- or safety-critical environments.

Product configurations and software options (Vicon Vero cameras)

This section provides information relating to the EU Declaration of Conformity (Vicon Vero cameras).

Conformity of the Metrological Performance of CLASS 1 Products Manufactured in Accordance with Annex VII, Section 5 of the Medical Devices Directive 93/42/EEC of the 14th June 1993. As amended by EU Council Directive 2007/47/EC of 5th September 2007.

We, Vicon Motion Systems Limited Unit 14 Minns Estate Oxford OX2 OJB United Kingdom

declare that the VICON VERO Cameras manufactured by VICON MOTION SYSTEMS LIMITED have been tested prior to shipment and meet the following metrological performance:

Measurement criteria

- Supporting software Blade 3.4 or later, Nexus 2.4 or later, and Tracker 3.3 or later.
- Resolution of the distance between the centers of two static 14 mm spherical markers located within a volume no less than 4 m x 4 m x 1.5 m to within 1 mm Mean; 1 mm Standard Deviation; sample size no less than 1,000.

About your Vicon camera packaging

The box in which your new Vicon Vantage, Vicon Vero or Vicon Vue camera arrived has a specially formed foam insert that holds the camera. This insert is made of a protective material that prevents most damage that could be caused during shipping. Vicon recommends that you retain this box as it provides the most convenient and safe way to ship your camera(s) in future.